





Aerial Replacement


- 1) Remove Passenger side air intake vent fixing screws x3

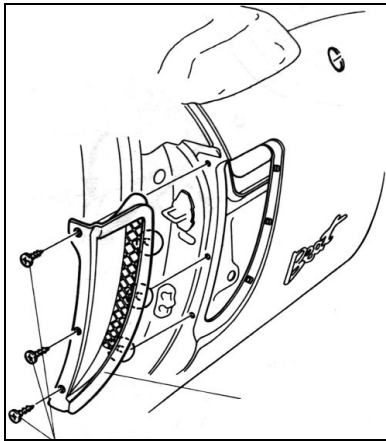


- 2) Slide air intake vent off clips.

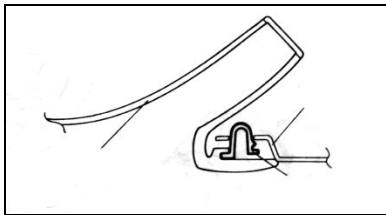


- 3) Unclip Air inlet pipe and move in towards engine.

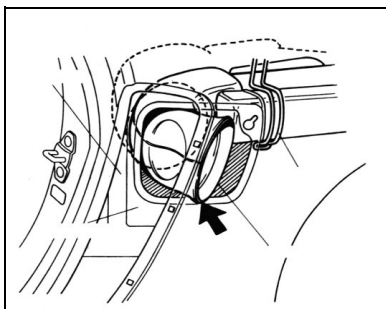


- 4) Connect lead to Aerial connector.

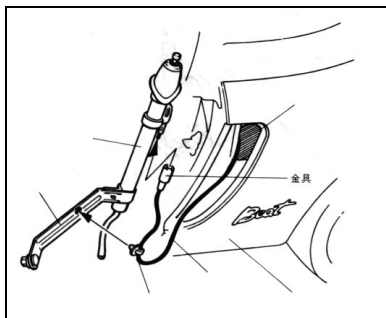


- 5) Wrap Aerial/Connector with tape.

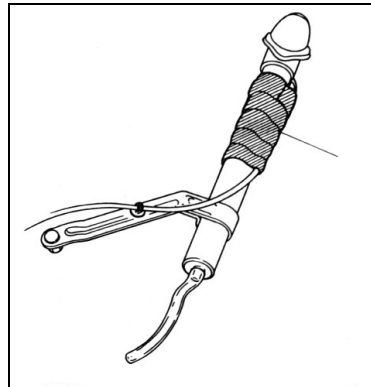


- 6) Remove Aerial Top fixing by unscrewing collar.

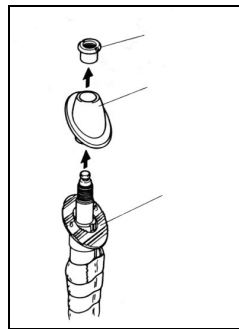

- 7) Locate Aerial into Rear wing.

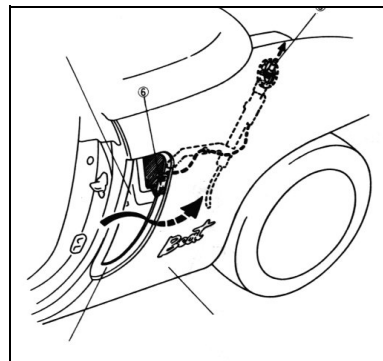


- 8) Attach fixing bracket and tighten nut

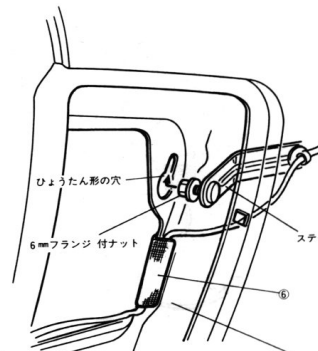



9) Fit top mount and tighten collar.

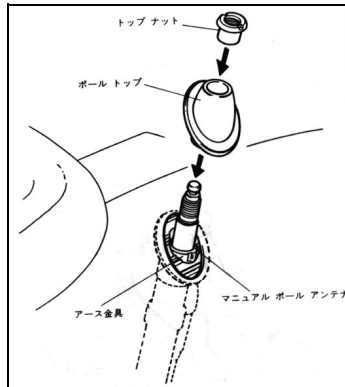

10) Refit Air inlet pipe back into clip.

11) Refit Air intake vent on to clips and refit screws